

IM-30CPE-U

Cuber, Self Contained

Production Capacity (kg/24h) approx. (AT 10°C, WT 10°C): 34 Storage bin capacity (kg) approx.: 11.5



ICE TYPE: Large cubes, Standard



Cube Size: (L-STANDARD Weight: 23 g

ACCESSORIES INCLUDED

Scoop, installation kit, legs

OPTIONAL ACCESSORIES

4HC-H water filtration, scoop holder kit

CORRESPONDING WATER FILTERS

4HC-H Single Water Filter, 4HC Replacement Cartridge

PRODUCT SERIES: IM CUBE ITEM NUMBER: M110-D200 COUNTRY OF ORIGIN: UK

Hoshizaki IM-30CPE-U UltraCube model is a self-contained ice maker with UVC sanitization function producing up to 34 kg of cube ice per 24 hours.

Ice cube dimensions and weight - disclaimer: The drawing is for illustration purposes only. Cube size and weight may be differ due to local installation conditions.

- Ice making system with an automatic rinse cycle
- Each ice cycle is made with fresh water
- Closed Cell System helps produce compact, hard and geometrically perfect ice
- Closed water circuit for contamination protection
- Easy external access to control panel
- System comes with a magnetic DC water pump with variable speed that has no direct coupling, which prevents any leakage
- UV sanitization function sanitizing air and water (UV-C irradiation)
- Cleanable air filter
- Removable door gasket
- Easily removable water pan assembly

WARRANTY PERIOD 3 Years on Parts & Labour based on country agreement EXTERIOR Stainless steel AISI 430, Galvanized steel (Rear)

Refrigerant: R290 / Refrigerant (kg): 0.065 / CO2 equivalent (kg): 0.195

OPERATING CONDITIONS

Ambient Temp.: 1-40°C, Water Supply Temp.: 5-35°C, Water Supply Pressure: 0.07-0.8MPa (0.7-8bar), Voltage Range: Rated Voltage ±6%


CERTIFICATIONS





Hoshizaki Europe B.V. Burgemeester Stramanweg 101 1101 AA Amsterdam The Netherlands HEBV Amsterdam office T. +31 (0)20 691 8499 Export line direct T. +31 (0)20 565 0429 sales.ex@hoshizaki-europe.com service.ex@hoshizaki-europe.com www.hoshizaki-europe.com



IM-30CPE-U

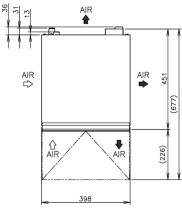

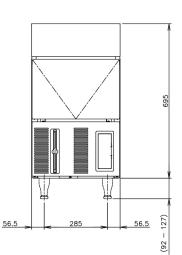

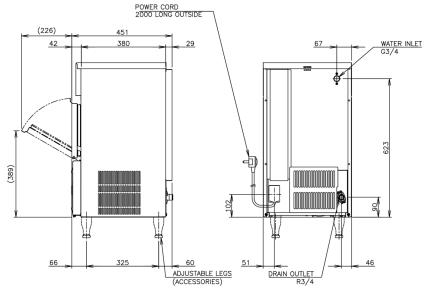

TECHNICAL SPECIFICATIONS

• • •	(kg/24h) approx.	Production Capacity (kg/24h) approx. (AT 21°C WT 15°C)	(kg/24h) approx.	,	Electrical Circuit Breaker Protection (A)	Consumption (kW)	Water Consumption (m3/24h) approx. (AT 10°C WT 10°C)	32°C, WT 21°C)
Air Cooled	34	32	23	1/220 - 240V/50Hz	5	0.215	0.15	0.57

SHIPPING SPECIFICATIONS

Dimensions W x D x H (mm), legs excluded	Dimensions of Legs (mm)	Net Weight (kg)	Dimensions, Packed, W x D x H (mm)	Gross Weight, Packed (kg)	Volume Packed (m3)	
398 x 451 x 695	For legs add 92-127mm	36	505 x 575 x 862	41	0.25	

Disclaimer: Every effort has been made to ensure that the information contained in this spec sheet is accurate at the time of publishing. Hoshizaki Europe BV assumes no responsibility or liability for typographical errors or omissions or for any misinterpretation of the information within the publication and reserves the right to change without notice.



Hoshizaki Belgium Hoshizaki Danmark Hoshizaki Deutschland Hoshizaki France Hoshizaki Iberia Hoshizaki Italia Hoshizaki Middle East info@hoshizaki.be info@hoshizaki.dk vertrieb@hoshizaki.de info@hoshizaki.fr info@hoshizaki.es commerciale@hoshizaki.it sales.ex@hoshizaki-europe.com Hoshizaki Netherlands Hoshizaki Norge Hoshizaki Sverige Hoshizaki UK Export countries Other countries info@hoshizaki.nl salg@hoshizaki.no orderSE@hoshizaki.dk uksales@hoshizaki.uk sales.ex@hoshizaki-europe.com sales.ex@hoshizaki-europe.com

www.hoshizaki-europe.com