



IM-240NE-HC CUBE ICE MAKER

Leading Naturally











Key Features

The IM-240NE-HC is a commercially used cube ice maker, which utilises Natural Refrigerant R290.



Energy efficient, with savings of 11,3% compared to HFC equivalent model.*

- ✓ Member of the Emerald Class, Hoshizaki's range of climate friendly ice makers.
- ✓ Can produce 210kg of cube ice per 24 hours (AT 10°C, WT 10°C).
- Unique ice making system that has an automatic rinse cycle. After every new batch of ice, the water reservoir drains and refills with fresh water.
- System comes with a magnetic water pump that has no direct coupling, which prevents any leakage.
- Closed water circuit offers the ultimate contamination protection, by reducing the number of points at which impurities can enter the ice making process.
- Electronically controlled to ensure an optimised ice making process under varying circumstances without the need for physical adjustments. Quality of ice is always consistent.
- Easily cleanable air filter allows end-users to carry out routine cleaning schedules. Extends product life expectancy and reduces the frequency and costs of maintenance call-outs.
- * Based on Internal comparative study. Please contact your local sales branch to find out more.



Ice: Standard Cube (L)
Size: Approx. 28 x 28 x 32mm



Available Models

Model	Air Cooled	Water Cooled	
IM-240NE-HC	~		

Bins

Model	Type of Bin	Max. Bin Capacity approx.
IM-240NE-HC	Self-contained	110kg

Production

Model	Ice Production per 24h approx.	Temperature	Water Consumption per 24h approx.	Ice Production per Cycle
IM-240NE-HC	Approx. 195kg (5mm) / 210kg (15mm) Approx. 180kg (5mm) / 195kg (15mm) Approx. 160kg (5mm) / 175kg (15mm)	AT 10°C, WT 10°C AT 21°C, WT 15°C AT 32°C, WT 21°C	0,67m³ 0,32m³ 0,29m³	Approx. 3.2kg / 140 pieces













IM-240NE-HC CUBE ICE MAKER


Leading Naturally


IM-240NE-HC

OCAD drawings available on our website

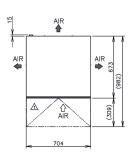

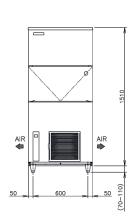

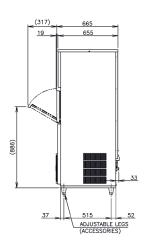

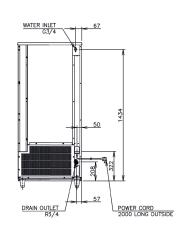

Specifications

	IM-240NE-HC
Dimensions W x D x H (mm)	704 x 665 x 1510
AC Supply Voltage	1/220-240V 50Hz
Electric Consumption (AT 32°C, WT 21°C)	930W
Heat Rejection (AT 32°C, WT 21°C)	2330W
Refrigerant Charge	R290 / 147g
Isolation	Polyurethane Foam
Weight Gross / Net	107kg / 120kg

Operation Requirements

	Ambient Temperature	1 - 40°C	
	Water Supply Tempera	ture 5 - 35°C	
	Water Supply Pressure	0,7-8bar (0,07-0.8MPa)	
1	Voltage Range	Rated Voltage ± 6%	

Accessories

Scoop	
Leg	
Installation Kit	



UK Office

2 The Technology Centre London Road Swanley Kent BR8 7AG United Kingdom

Hoshizaki Europe B.V.

T: +31 (0)20 6918499 F: +31 (o)20 6918768 Please use either number to contact Hoshizaki UK:

T: +44 (0)845 456 0585 F: +44 (0)132 283 8331 T: +44 (0)132 261 6900

F: +44 (0)132 261 6901

uksales@hoshizaki.uk www.hoshizaki.co.uk www.gramuk.co.uk

www.hoshizaki-europe.com www.gram-commercial.com